

## REPLACEMENT

### HINT:

There are 2 methods (a and b) to replace the oil seal which are as follows:

### REPLACE CRANKSHAFT REAR OIL SEAL


(a) If rear oil seal retainer is removed from cylinder block:

(1) Using a screwdriver and hammer, tap out the oil seal.

(2) Using SST and a hammer, tap in a new oil seal until its surface is flush with the rear oil seal retainer edge.

SST 09223 -56010

(3) Apply MP grease to the oil seal lip.

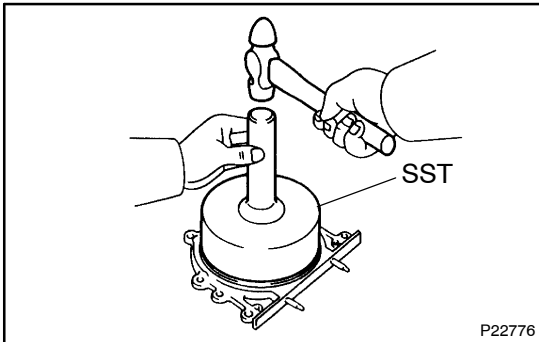


(b) If rear oil seal retainer is installed to cylinder block:

(1) Using a knife, cut off the oil seal lip.

(2) Using a screwdriver, pry out the oil seal.

### NOTICE:

**Be careful not to damage the crankshaft. Tape the screwdriver tip.**

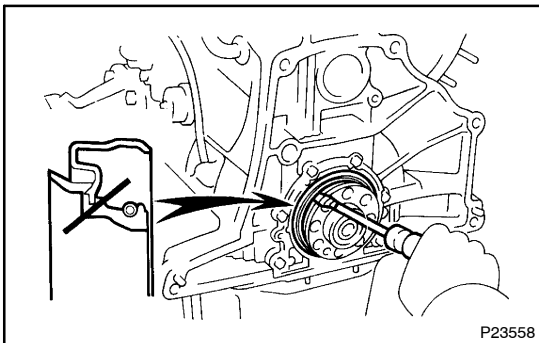

(3) Apply MP grease to a new oil seal lip.

(4) Using SST and a hammer, tap in the oil seal until its surface is flush with the rear oil seal retainer edge.

SST 09223 -56010

