


## FUEL DAMPER REPLACEMENT

FU04X-01

1. DRAIN FUEL FILTER AND DAMPER  
(See page FU-1)

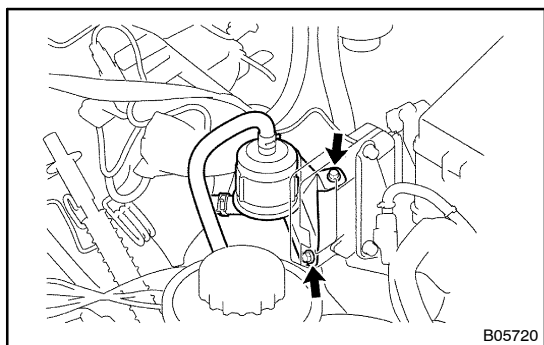

2. REPLACE FUEL DAMPER
  - (a) Remove the fuel damper.
    - (1) Disconnect the 2 fuel hoses.
    - (2) Remove the 2 bolts and fuel damper.
  - (b) Install the fuel damper.
    - (1) Install the fuel damper with the 2 bolts.  
**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**
    - (2) Connect the 2 fuel hoses.
3. FILL FUEL FILTER AND DAMPER WITH FUEL  
(See page FU-1)