







## **TEST**

## **LEAKAGE TEST**

While maintaining pressure at about 981 - 1,961 kPa (10 - 20 kgf/cm<sup>2</sup> 142 – 284 psi), below No.1 opening pressure (adjust by tester handle), check that there is not dripping for 10 seconds from the injection hole or around the retaining nut.

If the nozzle drips within 10 seconds, replace or clean and overhaul the nozzle assembly.

## 2. **SPRAY PATTERN TEST**

- The injection nozzle should shudder at a certain pumping (a) speed between 15 – 60 times (old nozzle) or 30 – 60 times (new nozzle) per minute.
- (b) Check the spray pattern during shuddering. If the spray pattern is not correct during shuddering, the nozzle must be replaced or cleaned.