


## REPLACEMENT

### REPLACE OIL SEAL

(a) Using a wrench, pry out the oil seal.

#### NOTICE:

**Be careful not to damage to the pump body.**

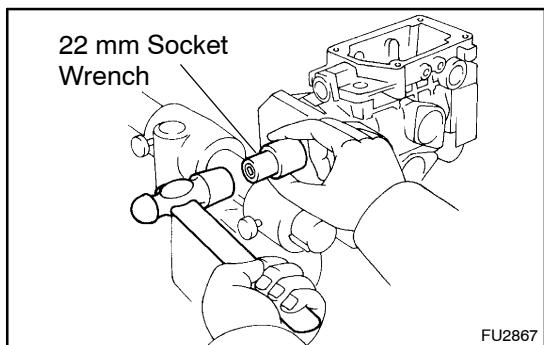

- (b) Apply MP grease to the lip of a new oil seal.
- (c) Using a 22 mm socket wrench, tap in the oil seal until its surface is flush with the pump housing.