


## INSPECTION

### 1. INSPECT CHECK VALVES

Push the valve with a wooden stick to check if it is stuck.  
If stuck, replace the check valve.

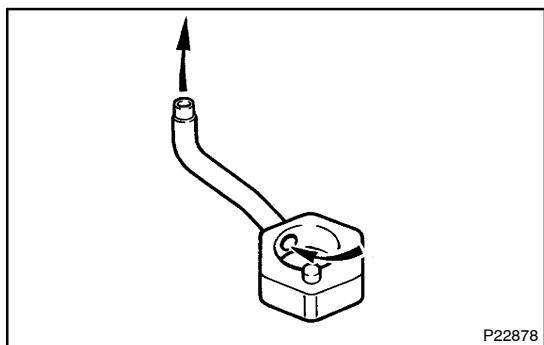

### 2. INSPECT OIL NOZZLES

Check the oil nozzle for damage or clogging.  
If necessary, replace the oil nozzle.