## **REASSEMBLY**

Reassembly is in the reverse order of disassembly.

(See page ST-9)

HINT:

At the time of assembly, please refer to the following items.

Use high -temperature grease to lubricate the bearing and gears when assembling the starter.

ST0FB-01