
ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI1I4-07

When using hand -held tester, troubleshooting in accordance with the procedure on the following page.

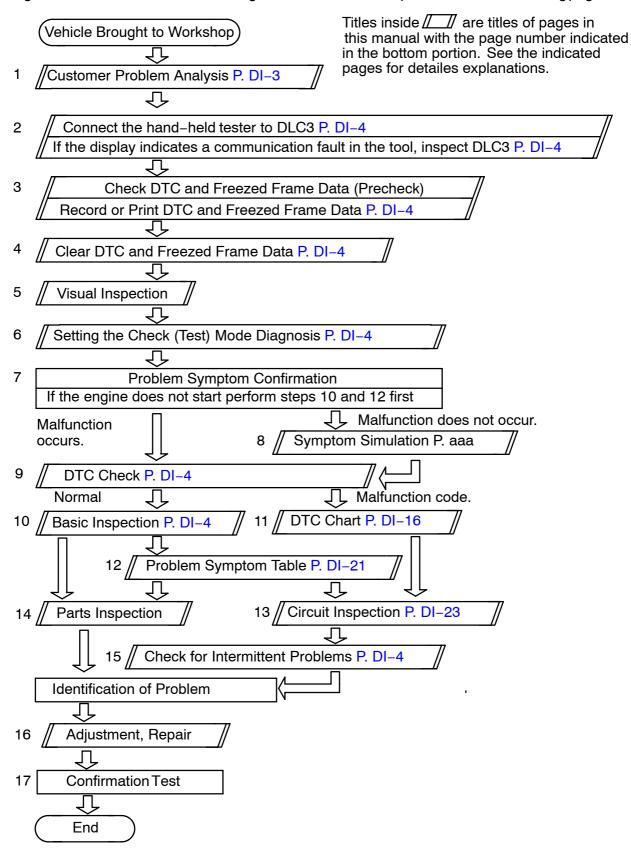

When not using hand -held tester, troubleshooting in accordance with the procedure on the following pages.

