

DTC	P1335/13	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	-----------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335/12,13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-50](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	No crankshaft position sensor signal to engine ECU with engine speed 1,000 rpm or more	<ul style="list-style-type: none">• Open or short in crankshaft position sensor circuit• Crankshaft position sensor• Starter• Engine ECU

WIRING DIAGRAM

Refer to DTC P0335/12,13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-50](#) for the WIRING DIAGRAM.

INSPECTION PROCEDURE

Refer to DTC P0335/12,13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-50](#) for the INSPECTION PROCEDURE.