

## **SUB FUEL PUMP**

FIGHN-01

### **ON-VEHICLE INSPECTION**

**CHECK SUB FUEL PUMP OPERATION AND FUEL PRESSURE (See page FI-16)**

**NOTICE:**

**Push the fuel tank changeover switch ON.**