



INSPECTION

1. REMOVE FUEL TANK CHANGEOVER SWITCH
2. INSPECT CHANGEOVER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	3 - 4	No continuity
ON	3 - 4	Continuity
Illumination circuit	1 - 2	Continuity

If continuity is not as specified, replace the switch.

3. REINSTALL FUEL TANK CHANGEOVER SWITCH