INSTALLATION

Installation is in the reverse order of removal.(See page FI-34)

FI0HW-02