

IDLE SPEED CONTROL (ISC) VALVE

ON-VEHICLE INSPECTION

FI013-02

INSPECT ISC VALVE OPERATION

- (a) Initial conditions:
 - Engine at normal operating temperature
 - Idle speed check correctly
 - Transmission in neutral position
- (b) Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.
- (c) After engine speed are kept at 1,000 – 1,500 rpm for 5 seconds, check that they return to idle speed.

If the engine speed operation is not as specified, check the ISC valve, wiring and ECU.

- (d) Remove the SST.
SST 09843-18040

