


## EFI MAIN RELAY INSPECTION

F10HZ-01

1. REMOVE RELAY BOX COVER
2. REMOVE EFI MAIN RELAY (Marking: EFI)

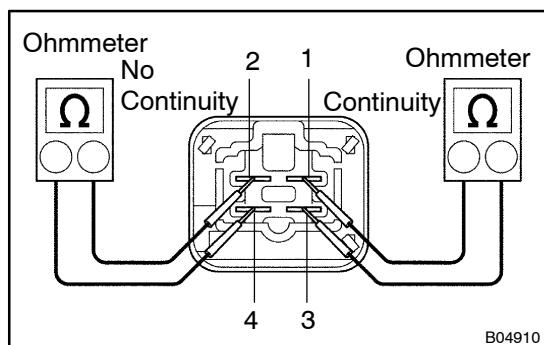


### 3. INSPECT EFI MAIN RELAY

- (a) Inspect the relay continuity.
  - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

  - (2) Check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

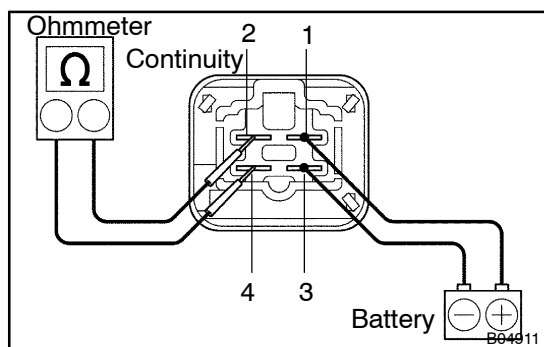

- (b) Inspect the relay operation.
  - (1) Apply battery positive voltage across terminals 1 and 3.
  - (2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.
4. REINSTALL EFI MAIN RELAY
5. REINSTALL RELAY BOX COVER