


## FUEL PUMP RELAY INSPECTION

F101E-01

### 1. REMOVE FUEL PUMP RELAY (Marking: FUEL/PMP)

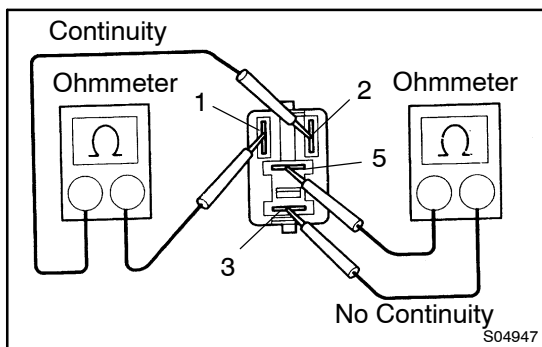

### 2. INSPECT FUEL PUMP RELAY


#### (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

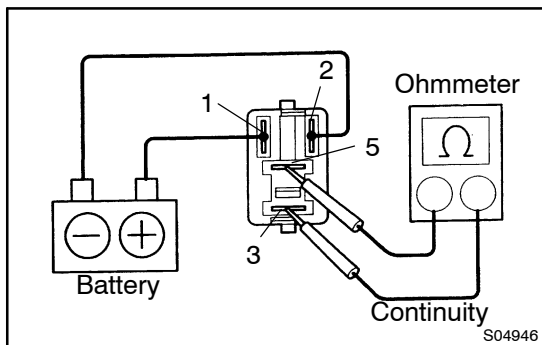

#### (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.
- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If operation is not as specified, replace the relay.

### 3. REINSTALL FUEL PUMP RELAY