



INSPECTION

1. REMOVE FUEL PUMP RESISTOR
2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

0.71 – 0.75 Ω at 20°C (68°F)

If the resistance is not as specified, replace the resistor.

3. REINSTALL FUEL PUMP RESISTOR