



## INSPECTION

1. REMOVE INTAKE AIR TEMPERATURE SENSOR
2. INSPECT INTAKE AIR TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: Refer to the graph**

If the resistance is not as specified, replace the sensor.

3. REINSTALL INTAKE AIR TEMPERATURE SENSOR