

## DISASSEMBLY

### 1. REMOVE VALVE LIFTERS AND SHIMS


HINT:

Arrange the valve lifters and shims in correct order.

### 2. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020 (09202-00010)

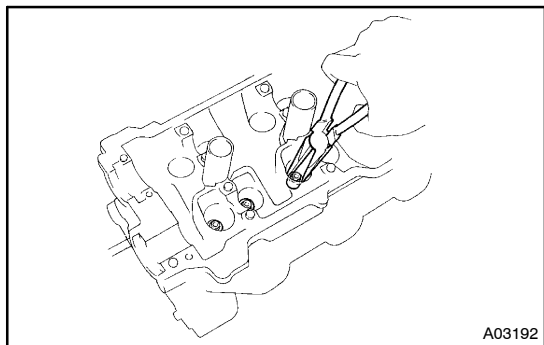

- (b) Remove these parts:

- Spring retainer
- Valve spring
- Valve
- Spring seat

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in correct order.

- (c) Using needle-nose pliers, remove the oil seal.