

## SUB FUEL PUMP (w/ Sub Fuel Tank)

FI0DI-01

### ON-VEHICLE INSPECTION

#### CHECK SUB FUEL PUMP OPERATION AND FUEL PRESSURE

(See steps 1 and 2 in [FI-7](#))

#### NOTICE:

Push the fuel tank changeover switch ON.