



INSPECTION

- 1. REMOVE FUEL TANK CHANGEOVER SWITCH
- 2. INSPECT CHANGEOVER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	3 – 4	No continuity
ON	3 – 4	Continuity
Illumination circuit	1 – 2	Continuity

If continuity is not as specified, replace the switch.

- 3. REINSTALL FUEL TANK CHANGEOVER SWITCH