

FI0E0-01

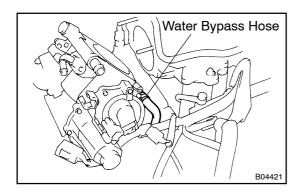

## **INSTALLATION**

## I. INSTALL THROTTLE BODY

(a) Connect the water bypass hose to the manifold thermostat on the throttle body.

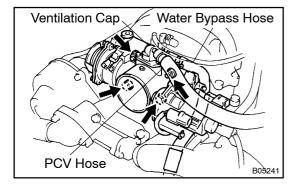

(b) Install a new gasket and the throttle body with the 2 bolts and 2 nuts.

## Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (c) Install the ventilation cap.
- (d) Connect the water bypass hose and PCV hose to the throttle body.
- (e) Connect the connectors and wire:
  - Throttle position sensor connector
  - Throttle control motor connector
  - Accelerator pedal position sensor connector
  - Accelerator pedal position sensor wire to 2 clamps on wire brackets
- 2. CONNECT ACCELERATOR CABLE TO THROTTLE BODY
- 3. INSTALL INTAKE AIR CONNECTOR
- 4. FILL WITH ENGINE COOLANT (See page CO-2)
- 5. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS
- 6. INSTALL V -BANK COVER