


## EFI MAIN RELAY INSPECTION


F10E3-01

1. REMOVE RELAY BOX COVER
2. REMOVE EFI MAIN RELAY (Marking: EFI)

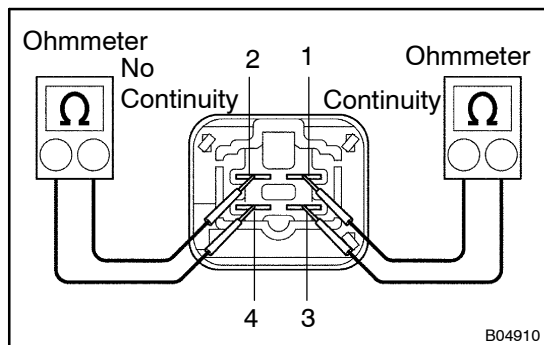

### 3. INSPECT EFI MAIN RELAY

- (a) Inspect the relay continuity.
  - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
 If there is no continuity, replace the relay.
  - (2) Check that there is no continuity between terminals 2 and 4.
 If there is continuity, replace the relay.

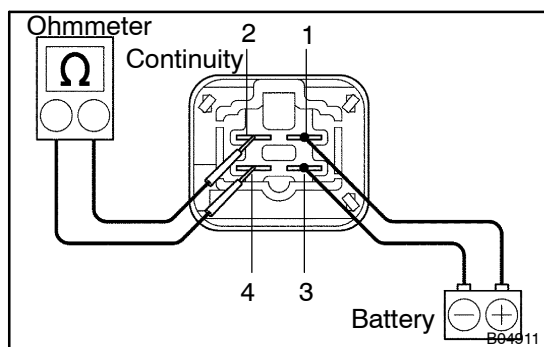

- (b) Inspect the relay operation.
    - (1) Apply battery positive voltage across terminals 1 and 3.
    - (2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.
 If there is no continuity, replace the relay.
4. REINSTALL EFI MAIN RELAY
  5. REINSTALL RELAY BOX COVER