


CIRCUIT OPENING RELAY (Except Europe) INSPECTION


F10E4-01

1. REMOVE CIRCUIT OPENING RELAY
(Marking: C/OPN)

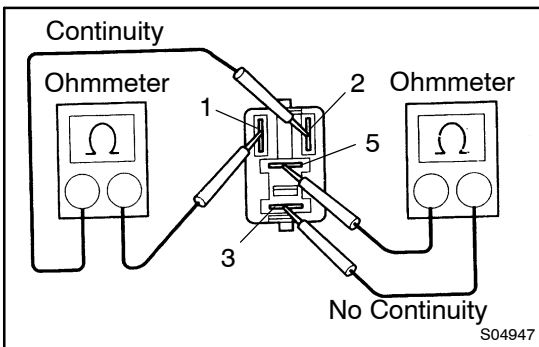

2. INSPECT CIRCUIT OPENING RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.
 - (2) Check that there is no continuity between terminals 3 and 5.
If there is continuity, replace the relay.

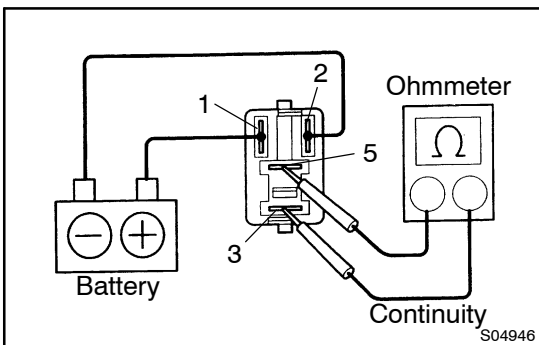

- (b) Inspect the relay operation.
 - (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
If there is no continuity, replace the relay.

3. REINSTALL CIRCUIT OPENING RELAY