



## INSPECTION

### 1. REMOVE FUEL TANK SELECT RELAY

### 2. INSPECT FUEL TANK SELECT RELAY

#### (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals SW and E.
- (2) Check that there is continuity between terminals RL and FPM.

If there is no continuity, replace the relay.

- (3) Check that there is no continuity between terminals RL and FPS.

If there is continuity, replace the relay.

#### (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals SW and E.
- (2) Using an ohmmeter, check that there is no continuity between the RL and FPS.

If there is continuity, replace the relay.

- (3) Check that there is continuity between terminals RL and FPS.

If there is no continuity, replace the relay.

### 3. REINSTALL FUEL TANK SELECT RELAY