

INSPECTION

1. **REMOVE SUB FUEL TANK FORCING DRIVING RELAY**
2. **INSPECT SUB FUEL TANK FORCING DRIVING RELAY**


(a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

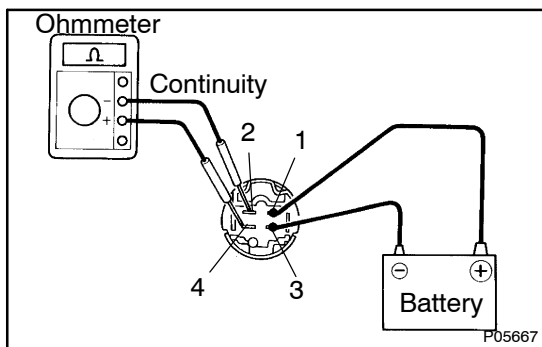

(b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 3.

- (2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

3. **REINSTALL SUB FUEL TANK FORCING DRIVING RELAY**