


INSTALLATION


1. INSTALL OIL COOLER

- (a) Clean the oil cooler contact surface on the oil cooler mounting.

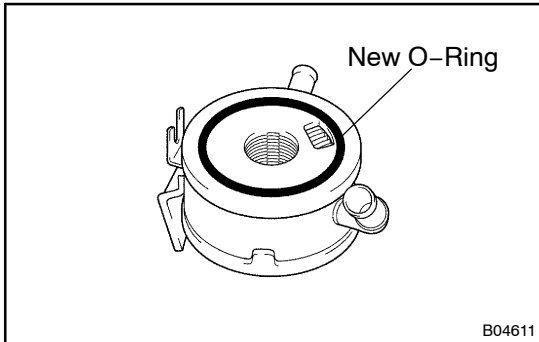

- (b) Install a new O-ring to the oil cooler.

- (c) Apply a light coat of engine oil on the threads and under the head of the union bolt.

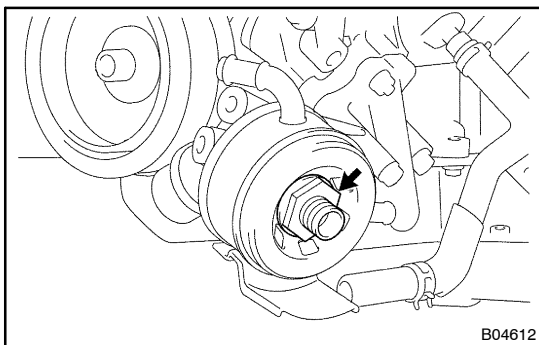

- (d) Install the plate washer and union bolt.

Torque: 78.5 N·m (800 kgf·cm, 58 ft·lbf)

- (e) Connect the 2 oil cooler hoses to the oil cooler.

2. INSTALL OIL FILTER (See page LU-2)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR ENGINE COOLANT AND ENGINE OIL LEAKS.

5. CHECK ENGINE OIL LEVEL