


REMOVAL

1. **REMOVE FRONT WHEEL**
2. **REMOVE BRAKE CALIPER**
 - (a) Remove the bolt and 2 gaskets from the brake caliper and disconnect the flexible hose.

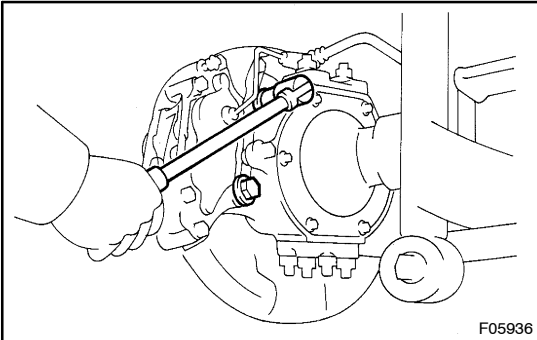


- (b) Remove the 2 bolts, washers and brake caliper from the steering knuckle.

3. **REMOVE DUAL MODE AUTOMATIC LOCKING HUB**
(See page SA-10)

4. **REMOVE SNAP RING, SPINDLE WASHER AND BRAKE SET FROM SPINDLE**

- (a) Using a snap ring expander, remove the snap ring.
 - (b) Remove the spindle washer and brake set.

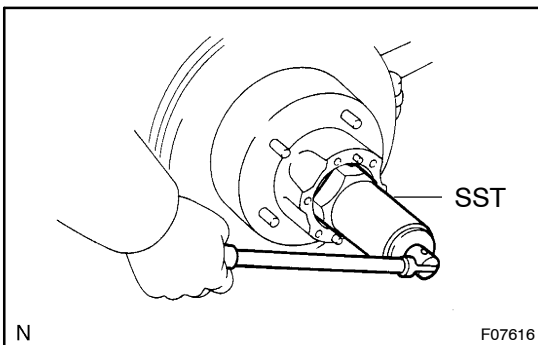

5. **REMOVE AXLE HUB WITH DISC FROM SPINDLE**

- (a) Using SST, remove the adjusting nut.
SST 09607 -60020
 - (b) Remove the axle hub with disc together with the outer bearing.