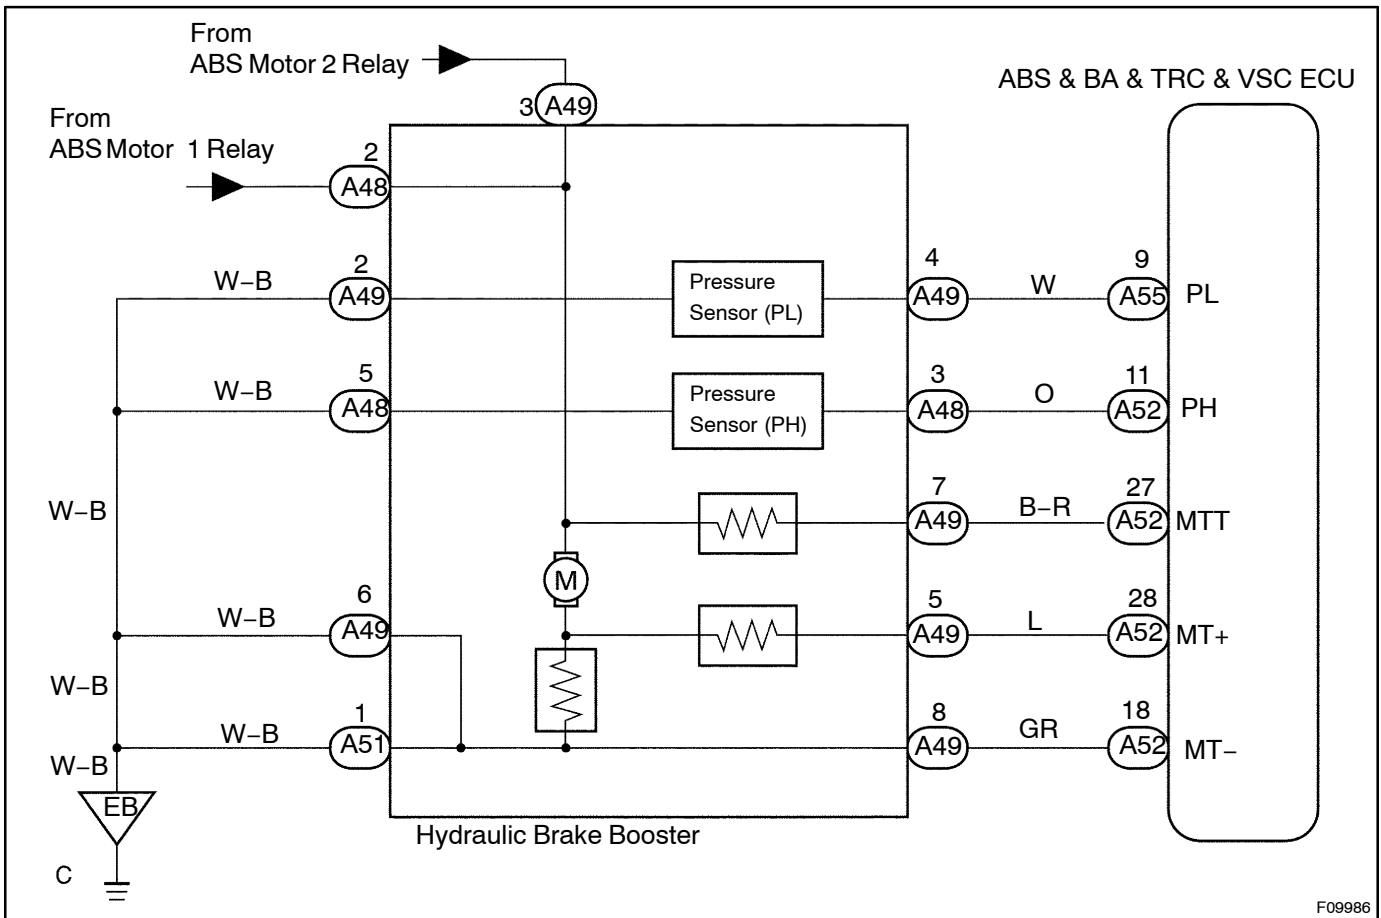


DTC	C 1254 / 54	Pressure Switch Circuit
------------	--------------------	--------------------------------

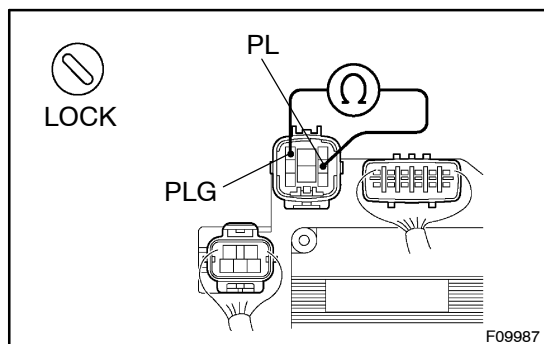
CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1254/54	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> After turning the ignition switch ON, short or open circuit in pressure switch (PL) continued for more than 1 sec. After turning the ignition switch ON open in pressure switch (PH) continued for more than 1 sec. 	<ul style="list-style-type: none"> Pressure switch (PH or PL) Pressure switch circuit

WIRING DIAGRAM



F09986

INSPECTION PROCEDURE**1 Check pressure switch (PL) resistance.****PREPARATION:**

- Disconnect the connector (8P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

CHECK:

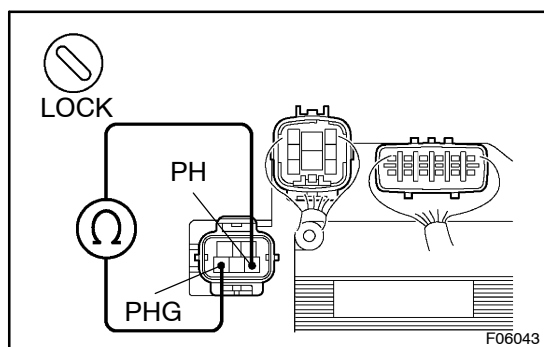
Measure resistance between terminals PL and PLG of hydraulic brake booster connector.

OK:

Resistance: 5.1 – 6.3 k Ω

HINT:

After inspection, connect the connector and clear the DTC ([See page DI-4](#)).

NG**Replace hydraulic brake booster assembly.****OK****2 Check pressure switch (PH) resistance.****PREPARATION:**

- Disconnect the connector (5P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

OK:

Resistance: 0.9 – 1.1 k Ω

HINT:

After inspection, connect the connector and clear the DTC ([See page DI-4](#)).

NG

Replace hydraulic brake booster assembly.

OK

3

Check for open and short circuit in harness and connector between pressure switch and ABS & BA & TRC & VSC ECU ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRC & VSC ECU.