 

 
 


 
 

 



 
 
 




 

 
 
 


# SUSPENSION AND AXLE

 
 

 
 


 



 

## SST (Special Service Tools)

PP2KH-01

	09223-15020	Oil Seal & Bearing Replacer	Front differential (RFS) Rear axle (RFS)
	09308-00010	Oil Seal Puller	Front axle (RFS) Front differential (IFS) Rear axle Rear differential
	09308-10010	Oil Seal Puller	Front and rear differential
	09316-60011	Transmission & Transfer Bearing Replacer	Front and rear differential
	(09316-00011)	Replacer Pipe	
	09330-00021	Companion Flange Holding Tool	Front and rear differential
	09350-30020	TOYOTA Automatic Transmission Tool Set	Front differential (IFS)
	(09350-07060)	No.1 Snap Ring Expander	
	09502-12010	Differential Bearing Replacer	Front differential (IFS)
	09504-22011	Differential Side Bearing Replacer	Front differential (IFS) Rear differential (w/ Diff. lock)
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	Front differential
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	Front and rear differential Rear suspension (RFS)

	09550-00032 Replacer	Front differential (IFS)
	09556-22010 Drive Pinion Front Bearing Remover	Front and rear differential
	09950-00020 Bearing Remover	Front drive shaft (IFS) Front and rear differential
	09950-30011 Puller A Set	Front and rear differential
	(09951-03010) Upper Plate	
	(09953-03010) Center Bolt	
	(09954-03010) Arm	
	(09955-03030) Lower Plate 130	
	(09956-03020) Adapter 18	
	09950-40011 Puller B Set	Front suspension Front and rear differential
	(09951-04020) Hanger 200	
	(09952-04010) Slide Arm	
	(09953-04030) Center Bolt 200	

## PREPARATION - SUSPENSION AND AXLE

	(09954-04010) Arm 25	
	(09955-04061) Claw No.6	
	(09957-04010) Attachment	
	(09958-04011) Holder	
	09950-60010 Replacer Set	Front suspension (IFS) Front differential (RFS) Rear suspension (RFS) Rear differential AHC pump & motor (IFS)
	(09951-00410) Replacer 41	
	(09951-00480) Replacer 48	
	09950-60020 Replacer Set No.2	Front and rear axle Front differential (IFS) Rear axle Rear differential
	(09951-00710) Replacer 71	
	(09951-00730) Replacer 73	
	(09951-00780) Replacer 78	
	09950-70010 Handle Set	Front and rear axle Front suspension Rear differential AHC pump & motor (IFS)
	(09951-07100) Handle 100	

	(09951-07150) Handle 150	
---	--------------------------	--