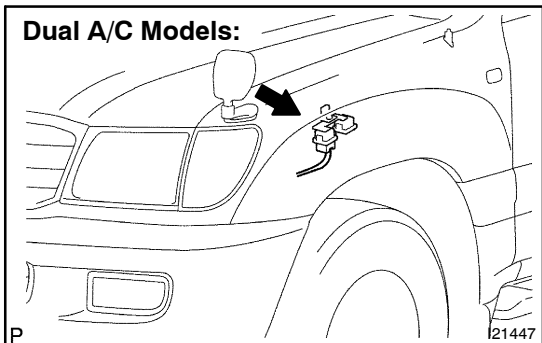
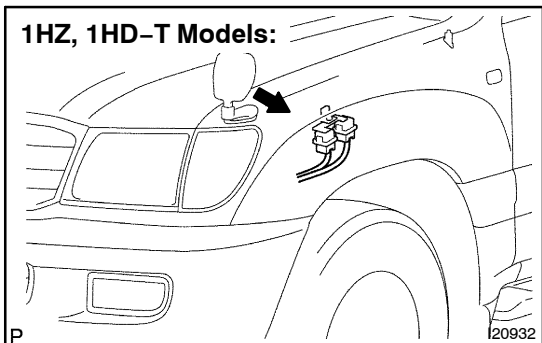


**Dual A/C Models:****1HZ, 1HD-T Models:**

## CONDENSER FAN RELAY INSPECTION

AC3AZ-01

**1. REMOVE CONDENSER FAN RELAY**

- Remove the LH fender liner.
- Disconnect the connector.
- Release the claw and remove the relay.

**2. INSPECT CONDENSER FAN RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

**3. INSTALL CONDENSER FAN RELAY**