


# VISCOUS HEATER RELAY (1HD-FTE) INSPECTION

AC1U8-02

- 1. REMOVE VISCOUS RELAY**
- (a) Remove the LH fender liner.
  - (b) Disconnect the connector.
  - (c) Release the claw and remove the relay.

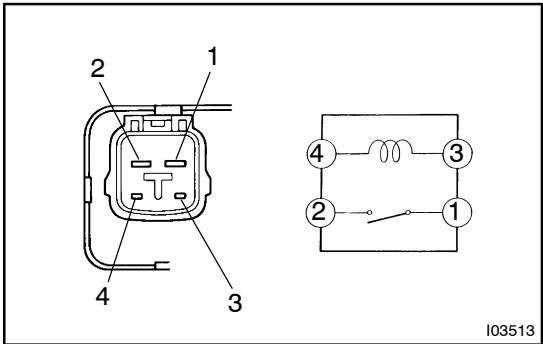

**2. INSPECT VISCOUS HEATER RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B+ between terminals 3 and 4.	1 – 2	Continuity

If continuity is not as specified, replace the relay.

**3. INSTALL VISCOUS RELAY**