



## INSPECTION

### INSPECT HYDRAULIC BRAKE BOOSTER PUMP MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 of pump motor, and the negative (-) lead to terminal 2.
- (b) Check that the pump motor operation.