



## DISPOSAL

### DISPOSAL METHOD OF ACCUMULATOR

- (a) Place the accumulator in a vise, cover it with a cloth over.
- (b) Using a saw, then cut the accumulator body slowly.

#### CAUTION:

**Do not cut at a place except a stretch.**

- (c) When the outer body of the accumulator is cut, gas discharges.