


## Tc Terminal Circuit

### CIRCUIT DESCRIPTION


Connecting terminals Tc and E<sub>1</sub> of check connector or Tc and CG of DLC3 causes the ECU to display the DTC by flashing the ABS warning light and VSC TRC warning light.

### WIRING DIAGRAM

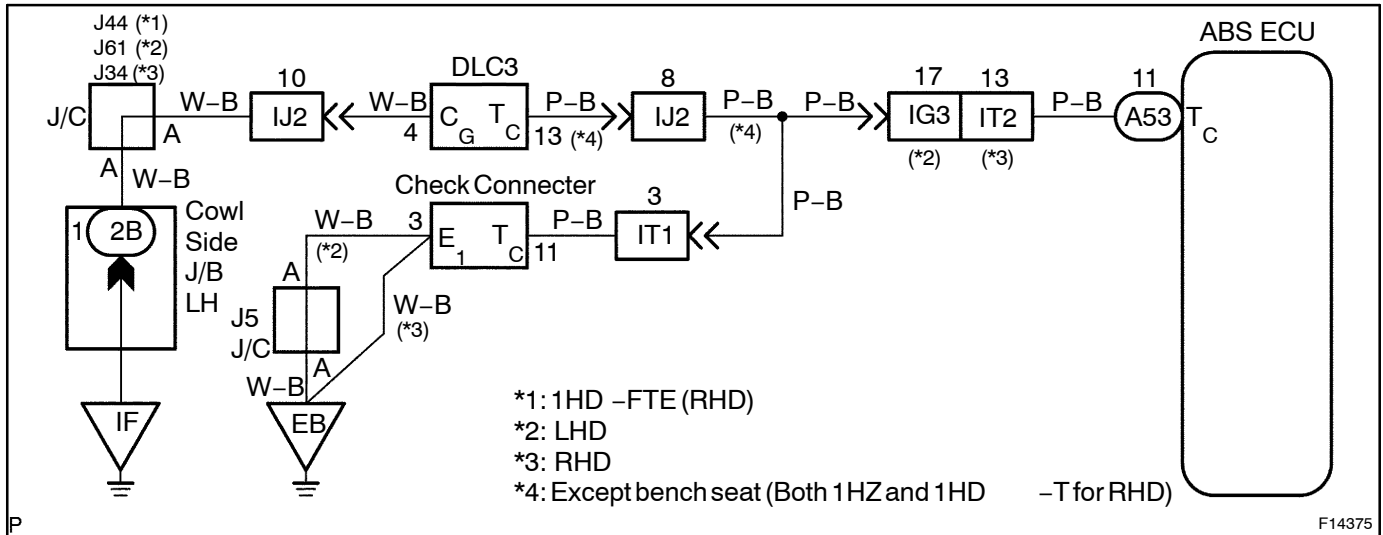

## INSPECTION PROCEDURE

- |          |  |
|----------|--|
| <b>1</b> | <b>Check voltage between terminals Tc and E<sub>1</sub> of check connector or Tc and CG of DLC3.</b> |
|----------|--|

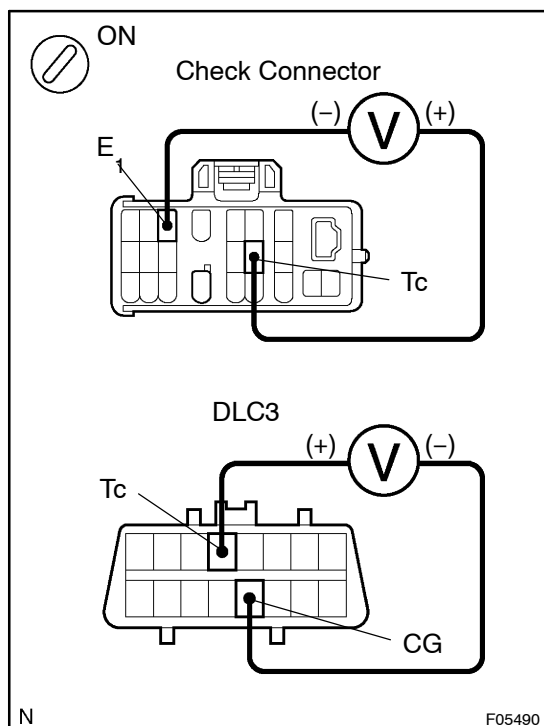**CHECK:**

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals Tc and E<sub>1</sub> of check connector or Tc and CG of DLC3.

**OK:****Voltage: 10 – 14 V****OK**

If ABS warning light does not blink even after Tc and E<sub>1</sub> or Tc and CG have been connected, the ECU<sub>1</sub> may be defective.

**NG**

- |          |   |
|----------|---|
| <b>2</b> | <b>IG switch OFF, and check for open and short circuit in harness and connector between ABS &amp; BA &amp; TRC &amp; VSC ECU and check connector or DLC3, check connector or DLC3 and body ground (See page IN-35).</b> |
|----------|---|

**NG**

Repair or replace harness or connector.

**OK**

**Check and replace ABS & BA & TRC & VSC ECU.**