

INSTALLATION

Installation is in the reverse order of removal ([See page SA-6](#)).

AFTER INSTALLATION, FILL AHC PUMP & MOTOR RESERVOIR WITH SUSPENSION FLUID AHC, BLEED AHC SYSTEM (See Pub No. RM6 16E on page SA -303) AND CHECK FOR LEAKS (See Pub. No. RM6 16E on page SA -305).