REASSEMBLY B042Z-01

Reassembly is in the reverse order of disassembly (See page BO-9).