

23. Vehicle position rotates without control. (Map rotates without control)

INSPECTION PROCEDURE

1 **Recheck. (While not rotating the vehicle, turn the ignition switch ON from OFF again.)**

OK

Normal. (While the vehicle was turning, the ignition switch was turned ON.)

NG

2 **System check mode. (Is "58-10" is displayed in the unit check mode of the navigation ECU?)**

Yes

Replace the navigation ECU.

No

3 **System check mode. (Is "58-43" is displayed in the unit check mode of the navigation ECU?)**

Yes

Replace and repair SPD terminal wire harness.

No

4 **Navigation check mode (vehicle signal check mode: SPD and gyro).**

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.