

## 26. Cassette tape cannot be inserted.

### INSPECTION PROCEDURE

1 Is there a foreign object inside tape player?

Yes

Remove foreign object.

No

2 Is auto search button radio operating normally?

NG

Radio assembly faulty.

OK

3 Check the cassette tape for deformation or peeling-off of the label.

NG

Replace cassette.

OK

4 Is the tape slack?

NG

Remove slack before using.

OK

Replace the radio receiver assembly.