

# 36. No power coming in.

## INSPECTION PROCEDURE

1	Is tape player operating normally?
---	------------------------------------

Yes	Radio assembly faulty.
-----	------------------------

No

2	Check if CIGAR fuse is OK?
---	----------------------------

NG	Replace fuse.
----	---------------

OK

3	Is power supplied to ACC terminal of power amplifier?
---	---

No	ACC wire harness faulty.
----	--------------------------

YES

4	Check if RADIO fuse is OK?
---	----------------------------

No	Replace fuse.
----	---------------

YES

**5** Is power supplied to +B terminal of power amplifier?

**No**

**+B wire harness faulty.**

**YES**

**6** Check if GND (wire harness side) of power amplifier grounded normally?

**NG**

**Ground faulty.**

**OK**

**7** Is power supplied to ACC terminal of radio assembly?

**No**

**Power amplifier or wire harness faulty.**

**YES**

**8** Is power supplied to +B terminal of radio receiver assembly?

**No**

**Power amplifier or wire harness faulty.**

**YES**

9	Check if GND (wire harness side) of radio receiver assembly grounded normally?
---	--

NG	Ground faulty.
----	----------------

OK
----

Radio receiver assembly faulty.
---------------------------------