

38. No power coming, but woofer amplifier not operating.

INSPECTION PROCEDURE

1 Is tape player operating normally?

Yes

Radio receiver assembly faulty.

No

2 Check if CIGER No. 2 fuse is OK?

NG

Replace fuse.

OK

3 Is power supplied to ACC terminal of stereo component amplifier?

No

ACC wire harness faulty.

YES

4 Check if RADIO fuse is OK?

NG

Replace fuse.

OK

5 Is power supplied to +B terminal of stereo component amplifier?

No

+B wire harness faulty.

YES

6 Check if GND (wire harness side) of radio receiver assembly grounded normally.

NG

GND faulty.

OK

7 Is power supplied to ACC terminal of radio receiver assembly?

No

Stereo component amplifier faulty.

YES

8 Is power supplied to +B terminal of radio receiver assembly?

No

Stereo component amplifier faulty.

YES

9 Check if GND (wire harness side) of radio receiver assembly grounded normally.

NG

GND faulty.

OK

