


TERMINALS OF ECU


w/o Navigation system:

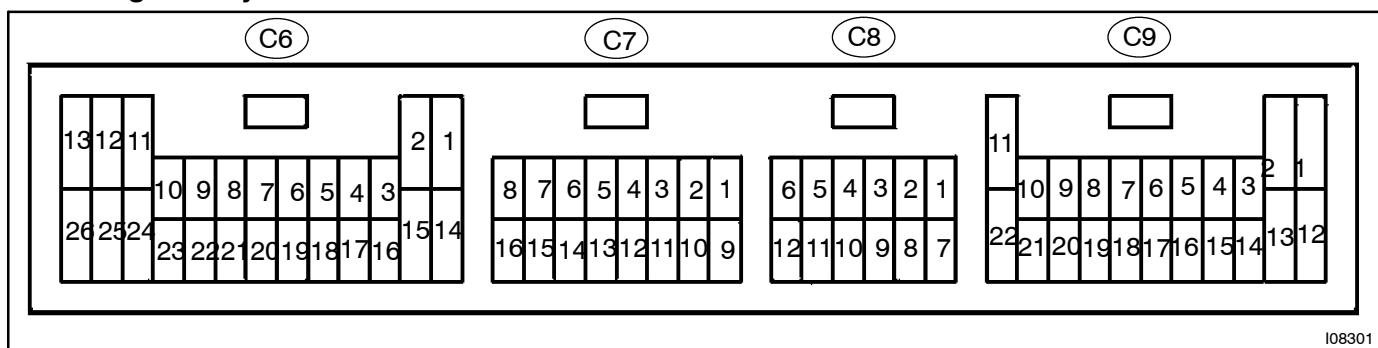

Symbols(Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IG ↔ GND (C9-1 ↔ C9-22)	R-L ↔ W-B	IG switch OFF → ON	10 – 14 V
ACC ↔ GND (C9-2 ↔ C9-22)	GR ↔ W-B	Turn ignition switch ACC	10 – 14 V
AIF ↔ GND (C9-6 ↔ C9-22)	G-W ↔ W-B	IG ON. Push REC switch	Below 1.0 V
		IG ON. Push FRS switch	10 – 14 V
AIR ↔ GND (C9-7 ↔ C9-22)	LG-B ↔ W-B	IG ON. Push REC switch	10 – 14 V
		IG ON. Push FRS switch	Below 1.0 V
FrAMC ↔ GND (C9-8 ↔ C9-22)	P-G ↔ W-B	IG ON. Set temp. : Max Cool	10 – 14 V
		IG ON. Set temp. : Max Hot	Below 1.0 V
FrAMH ↔ GND (C9-9 ↔ C9-22)	P-B ↔ W-B	IG ON. Set temp. : Max Cool	Below 1.0 V
		IG ON. Set temp. : Max Hot	10 – 14 V
+B ↔ GND (C9-12 ↔ C9-22)	G-R ↔ W-B	Always	10 – 14 V
FrS5 ↔ FrSG (C8-1 ↔ C8-12)	G-R ↔ Y-G	IG ON	4.5 – 5.5 V
FrTR ↔ FrSG (C8-2 ↔ C8-12)	B ↔ Y-G	IG ON. Cabin temp.: 25 °C (77 °F)	1.8 – 2.2 V
		IG ON. Cabin temp.: 40 °C (104 °F)	1.2 – 1.6 V
TAM ↔ FrSG (C8-3 ↔ C8-12)	L-Y ↔ Y-G	IG ON. Ambient temp.: 25 °C (77 °F)	1.3 – 1.8 V
		IG ON. Ambient temp.: 40 °C (104 °F)	0.8 – 1.3 V
FrTE ↔ FrSG (C8-4 ↔ C8-12)	GR-B ↔ Y-G	IG ON. Evaporator temp.: 0 °C (32 °F)	2.0 – 2.4 V
		IG ON. Evaporator temp.: 15 °C (59 °F)	1.4 – 1.8 V
TS ↔ FrSG (C8-6 ↔ C8-12)	B-Y ↔ Y-G	IG ON. Sensor subjected electric light	0.8 – 4.3 V
		IG ON. Sensor covered by a cloth	Below 0.8 V
FrTP ↔ FrSG (C8-8 ↔ C8-12)	B-Y ↔ Y-G	IG ON. Set temp. : Max. Cool	3.5 – 4.5 V
		IG ON. Set temp. : Max. Hot	0.5 – 1.5 V
TPI ↔ FrSG (C8-9 ↔ C8-12)	L-R ↔ Y-G	IG ON. Push REC switch	3.5 – 4.5 V
		IG ON. Push FRS switch	0.5 – 1.5 V
FACE ↔ GND (C7-3 ↔ C9-22)	GR ↔ W-B	Mode control switch except FACE → FACE	From 10 – 14 V to below 1.0 V
B/L ↔ GND (C7-4 ↔ C9-22)	BR-W ↔ W-B	Mode control switch except BI-LEVEL → BI-LEVEL	From 10 – 14 V to below 1.0 V
FOOT ↔ GND (C7-5 ↔ C9-22)	W ↔ W-B	Mode control switch except FOOT → FOOT	From 10 – 14 V to below 1.0 V

F/D ↔ GND (C7-10 ↔ C9-22)	P-L ↔ W-B	Mode control switch except FOOT/DEF ⁻ → FOOT/DEF	From 10 – 14 V to below 1.0V
DEF ↔ GND (C7-11 ↔ C9-22)	B-W ↔ W-B	Mode control switch except DEF ⁻ → DEF	From 10 – 14 V to below 1.0V
FrBLW ↔ GND (C7-12 ↔ C9-22)	W-R ↔ W-B	Blower fan OFF ⁻ → M2 → DEF	ON: Below 1.0V
			OFF: 10 – 14 V
FrHR ↔ GND (C7-13 ↔ C9-22)	Y-R ↔ W-B	Blower fan OFF ⁻ → ON	From 10 – 14 V to below 1.0V
MGC ↔ GND (C7-14 ↔ C9-22)	L ↔ W-B	A/C compressor OFF ⁻ → ON	From 10 – 14 V to below 1.0V
LOCK ↔ FrSG (C6-7 ↔ C8-12)	W-L ↔ Y-G	A/C compressor ON	Pulse
TW ↔ GND (C6-9 ↔ C9-22)	Y-B ↔ W-B	IGN ON:	Pulse
PSW ↔ GND (C6-10 ↔ C9-22)	L-W ↔ W-B	A/C refrigerant pressure: less than 0.19 MPa (2.0 kgf/cm ²) or more than 3.14 MPa (32 Kgf/cm ²)	From 10 – 14 V to below 1.0V
IGN ↔ GND (C6-13 ↔ C9-22)	B ↔ W-B	Engine idling	Pulse
SPD ↔ GND (C6-22 ↔ C9-22)	V ↔ W-B	Turn propeller shaft slowly	Pulse
ACT ↔ GND (C6-23 ↔ C9-22)	L-B ↔ W-B	Start engine. A/C switch: ON Magnetic clutch: Engaged	10 – 14 V
		Start engine. A/C switch: ON Magnetic clutch: Not engaged	Below 1.0V

w/ Navigation system:

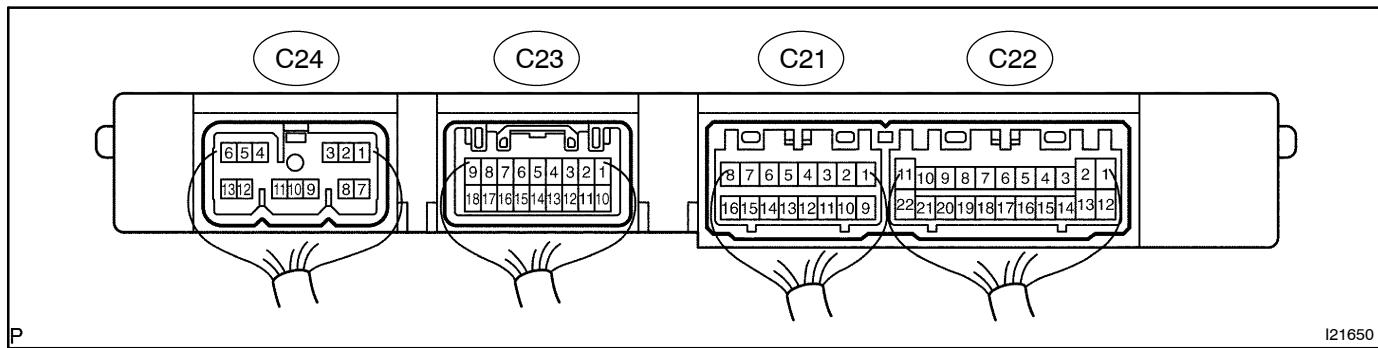

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
B ↔ GND (C22-1 ↔ C22-11)	G-R ↔ W-B	Always	10 – 14 V
ILL+ ↔ GND (C22-2 ↔ C22-11)	G ↔ W-B	IG ON. Taillight switch: TAIL	10 – 14 V
PSW ↔ GND (C22-4 ↔ C22-11)	L-W ↔ W-B	A/C refrigerant pressure: less than $0_{\frac{2}{2}}$ 19 MPa (2.0 kgf/cm^2) or more than 3. 14 MPa (3, 140 kgf/cm 2)	From 10 – 14 to Below 1.0
SPD ↔ GND (C22-6 ↔ C22-11)	V ↔ W-B	IG ON. Turn front wheel slowly	Pulse generation
TW ↔ GND (C22-7 ↔ C22-11)	Y-B ↔ W-B	IG ON.	Pulse generation
ACT ↔ GND (C22-8 ↔ C22-11)	L-B ↔ W-B	Start engine. A/C switch: ON Magnetic clutch: Engaged	10 – 14 V
		Start engine. A/C switch: ON Magnetic clutch: Not engaged	Below 1.0 V
GND ↔ Body ground (C22-11 ↔ Body ground)	W-B	Always	Continuity
IG+ ↔ GND (C22-12 ↔ C22-11)	R-L ↔ W-B	IG ON.	10 – 14 V
ACC ↔ GND (C22-13 ↔ C22-11)	GR ↔ W-B	IG ACC.	10 – 14 V
AIR ↔ GND (C22-16 ↔ C22-11)	LG-B ↔ W-B	IG ON. Air intake selector: RECIRCULATE	10 – 14 V
		IG ON. Air intake selector: FRESH	Below 1.0 V
AIF ↔ GND (C22-17 ↔ C22-11)	G-W ↔ W-B	IG ON. Air intake selector: RECIRCULATE	Below 1.0 V
		IG ON. Air intake selector: FRESH	10 – 14 V
FrAMH ↔ GND (C22-18 ↔ C22-11)	P-B ↔ W-B	IG ON. Set temp. (Front A/C): MAX. COOL	Below 1.0 V
		IG ON. Set temp. (Front A/C): MAX. WARM	10 – 14 V
FrAMC ↔ GND (C22-19 ↔ C22-11)	P-G ↔ W-B	IG ON. Set temp. (Front A/C): MAX. COOL	10 – 14 V
		IG ON. Set temp. (Front A/C): MAX. WARM	Below 1.0 V
VER2 ↔ GND (C22-21 ↔ C22-11)	W-B ↔ W-B	Always	Continuity
TS ↔ SG (C21-2 ↔ C21-1)	G-R ↔ B-Y	IG ON. Solar sensor is subjected to electric light	0.8 – 4.3 V
		IG ON. Solar sensor is covered by a cloth	Below 0.8 V
TAM ↔ SG (C21-3 ↔ C21-1)	L-Y ↔ Y-G	IG ON. Ambient temp.: 25 °C (77 °F)	1.8 – 2.2 V
		IG ON. Ambient temp.: 40 °C (104 °F)	1.2 – 1.6 V
FrTP ↔ SG (C21-5 ↔ C21-1)	B-Y ↔ Y-G	IG ON. Set temp. (Front A/C): MAX. COOL	3.5 – 4.5 V
		IG ON. Set temp. (Front A/C): MAX. WARM	Below 1.0 V
FrLAT (C21-7)	W	Communication circuit (between front A/C amplifier and rear A/C amplifier)	–

FrCID (C21-8)	L	Communication circuit (between front A/C amplifier and rear A/C amplifier)	–
FrS5 ↔ SG (C21-9 ↔ C22-1)	G-R ↔ Y-G	IG ON.	4.5 – 5.5V
FrTR ↔ SG (C21-10 ↔ C21-1)	B ↔ Y-G	IG ON. Cabin temp. (Front side): 25 °C (77 °F)	1.8 – 2.2V
		IG ON. Cabin temp. (Front side): 40 °C (104 °F)	1.2 – 1.6V
FrTE ↔ SG (C21-11 ↔ C21-1)	GR-B ↔ Y-G	IG ON. Evaporator temp. (Front A/C): 0 °C (32 °F)	2.0 – 2.4V
		IG ON. Evaporator temp. (Front A/C): 15 °C (59 °F)	1.4 – 1.8V
TPI ↔ SG (C21-13 ↔ C21-1)	L-R ↔ Y-G	IG ON. Air intake selector: RECIRCULATE	3.5 – 4.5V
		IG ON. Air intake selector: FRESH	Below 1.0V
FrCSD (C21-15)	R	Communication circuit (between front A/C amplifier and rear A/C amplifier)	–
FrCLK (C21-16)	G	Communication circuit (between front A/C amplifier and rear A/C amplifier)	–
MPX- (C23-1)	P-B	Multiplex communication circuit	–
CLK (C23-2)	L-R	Communication circuit (between front A/C amplifier and clock)	–
DPD (C23-3)	L-W	Communication circuit (between front A/C amplifier and center cluster integration panel)	–
DEF ↔ GND (C23-6 ↔ C22-11)	B-W ↔ W-B	IG ON. Air flow selector: DEF.	Below 1.0V
		IG ON. Air flow selector: Except DEF.	10 – 14 V
B/L ↔ GND (C23-8 ↔ C22-11)	BR-W ↔ W-B	IG ON. Air flow selector: B/L	Below 1.0V
		IG ON. Air flow selector: Except B/L	10 – 14 V
IGN ↔ GND (C23-9 ↔ C22-11)	B ↔ W-B	IG ON.	Pulse generation
MPX+ (C23-10)	P-L	Multiplex communication circuit	–
BLK (C23-11)	L	Communication circuit (between front A/C amplifier and center cluster integration panel)	–
STX (C23-12)	L-B	Communication circuit (between front A/C amplifier and center cluster integration panel)	–
SWD (C23-13)	L-Y	Communication circuit (between front A/C amplifier and center cluster integration panel)	–
LOCK ↔ GND (C23-15 ↔ C22-11)	W-L ↔ W-B	Start engine. Magnetic clutch: Engaged	Pulse generation
F/D ↔ GND (C23-16 ↔ C22-11)	P-L ↔ W-B	IG ON. Air flow selector: FOOT/DEF.	Below 1.0V
		IG ON. Air flow selector: Except FOOT/DEF.	10 – 14 V
FOOT ↔ GND (C23-17 ↔ C22-11)	W ↔ W-B	IG ON. Air flow selector: FOOT	Below 1.0V
		IG ON. Air flow selector: Except FOOT	10 – 14 V
FACE ↔ GND (C23-18 ↔ C22-11)	GR ↔ W-B	IG ON. Air flow selector: FACE	Below 1.0V
		IG ON. Air flow selector: Except FACE	10 – 14 V
RDFGR ↔ GND (C24-3 ↔ C22-11)	LG ↔ W-B	IG ON. Rear defogger switch: ON	Below 1.0V
		IG ON. Rear defogger switch: OFF	10 – 14 V
AC1 ↔ GND (C24-4 ↔ C22-11)	W-G ↔ W-B	Start engine. Magnetic clutch: Engaged	Below 1.0V
		Start engine. Magnetic clutch: Not engaged	10 – 14 V
MGC ↔ GND (C24-11 ↔ C22-11)	L ↔ W-B	Start engine. Magnetic clutch: Engaged	Below 1.0V
		Start engine. Magnetic clutch: Not engaged	10 – 14 V

DIAGNOSTICS – AIR CONDITIONING SYSTEM

FrHR ↔ GND (C24-12 ↔ C22-11)	Y-R ↔ W-B	IG ON. Blower motor: Operate	Below 1.0 V
		IG ON. Blower motor: Not operate	10 – 14 V
FrBLW ↔ GND (C24-13 ↔ C22-11)	W-R ↔ W-B	IG ON. Blower motor: Operate	Below 1.0 V
		IG ON. Blower motor: Not operate	10 – 14 V