
DI914-01

Compressor Circuit

CIRCUIT DESCRIPTION


A/C amplifier switches the A/C magnetic clutch relay ON, thus turning the A/C compressor magnetic clutch ON.


WIRING DIAGRAM

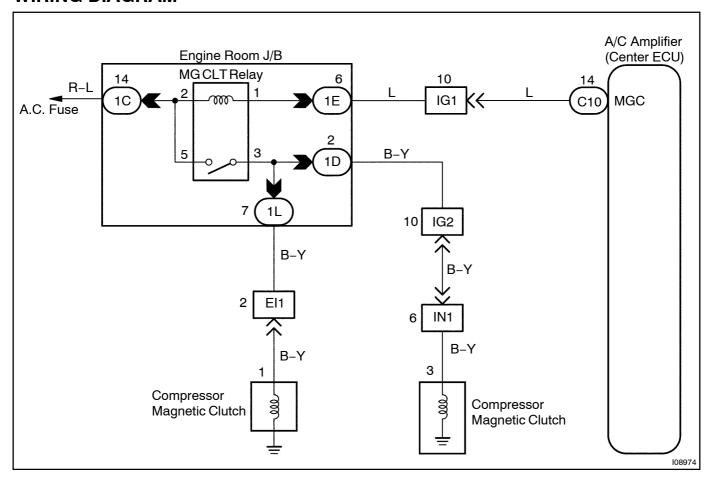

INSPECTION PROCEDURE

1 Check voltage between terminal MGC of A/C amplifier connector.

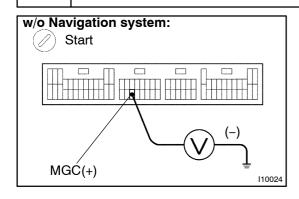

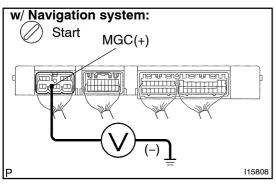



- (a) Start engine.
- (b) Push AUTO SW.
- (c) Measure voltage between terminal MCG of A/C amplifier connector and body ground when A/C switch is ON and OFF.


OK:

A/C switch	Voltage
ON	0 V
OFF	10 – 14 V





2 Check A/C compressor magnetic clutch.

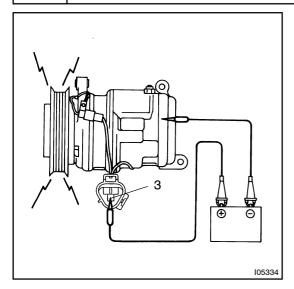

PREPARATION:

Disconnect magnetic clutch connector.

CHECK:

Connect positive (+) lead connected to battery to magnetic clutch connector terminal 3.

OK:

Magnetic clutch is energized.

NG

Repair A/C compressor magnetic clutch.

ОК

3 Check harness and connector between A/C compressor and MC CLT relay (See page IN-34).

NG

Repair or replace harness or connector.

ОК

Check and replace A/C amplifier.