

## REMOVAL

### 1. DISCONNECT NO.2 AIR TUBE

### 2. REMOVE THROTTLE BODY

- (a) Disconnect the throttle control motor connector and throttle full switch connector.
- (b) Remove the 2 bolts and 2 nuts, throttle body and gasket.

**Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)**

- (c) Remove the bolts, intake heater and gasket.

**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**