

REMOVAL

REMOVE INTAKE MANIFOLD WITH INTAKE AIR CONTROL VALVE

([See page EM-23](#))