


# HEATER MAIN RELAY INSPECTION

AC302-01

## 1. REMOVE HEATER MAIN RELAY

Remove the heater main relay.

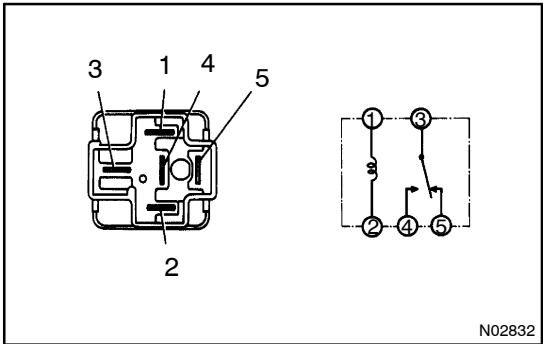

N02832

## 2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

## 3. INSTALL HEATER MAIN RELAY