



REAR HEATER RELAY INSPECTION

AC3Q3-01

1. REMOVE ENGINE ROOM J/B
2. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	29 – 31	Continuity
Apply B+ between terminals 29 and 31.	2 – 3	Continuity

If continuity is not as specified, replace the engine room J/B.

3. INSTALL ENGINE ROOM J/B