



# WATER TEMPERATURE CUT RELAY (1HZ, 1HD-T) INSPECTION

AC305-01

1. REMOVE ENGINE ROOM J/B
2. INSPECT WATER TEMPERATURE CUT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	45 – 63	Continuity
Apply B+ between terminals 45 and 63	63 – 107	Continuity

If continuity is not as specified, replace the engine room J/B.

3. INSTALL ENGINE ROOM J/B