


VISCOUS HEATER RELAY (1HD-FTE) INSPECTION

AC1U8-03

- 1. REMOVE VISCOUS HEATER RELAY**
Remove the viscous heater relay.

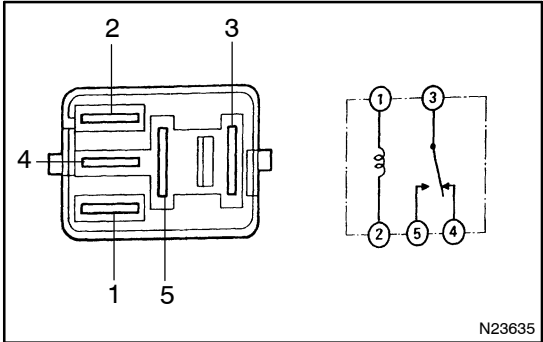

- 2. INSPECT VISCOUS HEATER RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

- 3. INSTALL VISCOUS HEATER RELAY**