



MAGNETIC CLUTCH RELAY INSPECTION

AC306-01

1. REMOVE ENGINE ROOM J/B
2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	57 – 65	Continuity
Apply B+ between terminals 57 and 65	63 – 65	Continuity

If continuity is not as specified, replace the engine room J/B.

3. INSTALL ENGINE ROOM J/B