
ATOOC O

OPERATION

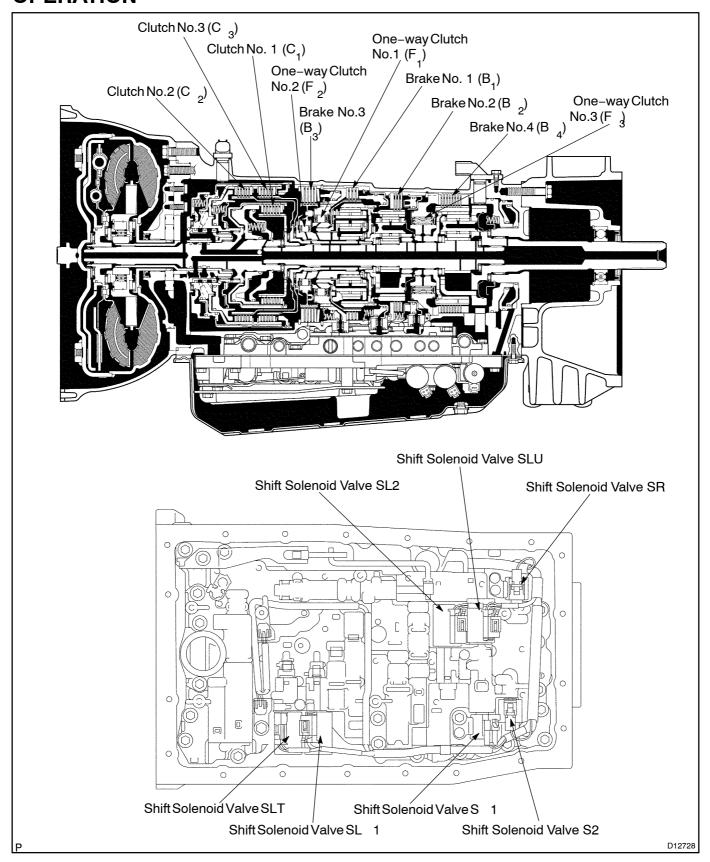

Shift Lever Range	Gear Position	S1	S2	SR	SL 1	SL2	SLU	C 1	C	C ₃	B 1	B 2	B 3	B 4	F 1	F 2	F 3
Р	Park	0	×	×	×	0	×	×	×	×	×	×	×	×	×	×	×
R	Reverse	0	×	×	×	0	×	×	×	0	0	×	×	0	0	×	×
N	Neutral	0	×	×	×	0	×	×	×	×	×	×	×	×	×	×	×
D	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	0	×	0	×	0	×	×	0	×	0	×	×
	4th	×	×	×	×	0	0	0	0	0	×	×	0	×	×	×	×
	5th	×	×	0	0	×	0	×	0	0	0	×	0	×	×	×	×
4	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	0	×	0	×	0	×	×	0	×	0	×	×
	4th	×	×	×	×	0	0	0	0	0	×	×	0	×	×	×	×
3	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	×	×	0	×	0	0	×	0	×	0	×	×
2	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	0	×	×	×	0	×	×	×	0	0	×	0	0	×
L	1st	0	×	×	×	×	×	0	×	×	×	×	×	0	×	×	0

 \bigcirc : Operating

F1, F2, F3: Operate only when driving