



## INSTALLATION

### 1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

**Correct distance: More than 43.4 mm (1.710 in.)**

### 2. TRANSMISSION INSTALLATION

Installation is in the reverse order of removal ([See page AT-37](#)).

HINT:

- Transmission control rod and park/neutral position switch ([See page DI-102](#)).
- ATF level ([See page DI-102](#)).
- Conduct the road test of the vehicle ([See page DI-102](#)).